

# TOLL4EUROPE OBU

## T4E OBU Composition



### Signal



**WHITE** T4E OBU is switched off, or in sleep mode, OBU is not yet active.



**GREEN:** T4E OBU is ready for operation. You can drive with the OBU, if the LED status indication is green.




**RED:** T4E OBU is either technically not ready for operation **OR** the OBU has not been activated for the toll service.

At first, please, check via the menu in the T4E OBU display which toll services is activated.


In case of a technical defect you will see an error message. In this case, do not drive with the OBU and contact your Customer Service.

### Startup screen

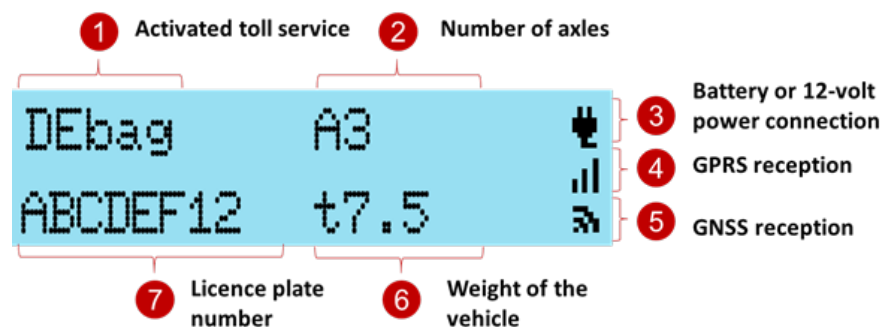

# TOLL4EUROPE OBU

## Navigate in the menu

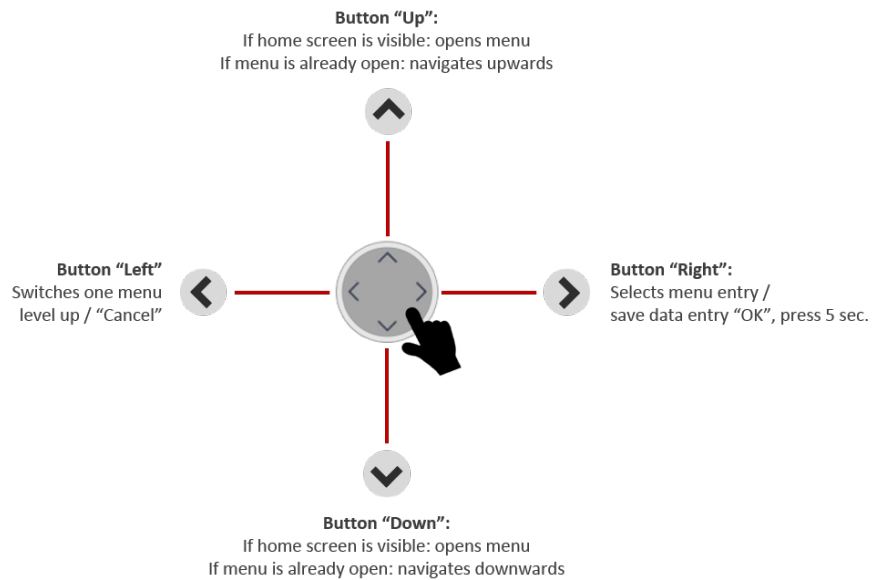

If inactive, the startup screen reappears after two minutes.

### Select language

Main Menu	▼		
Language	▶	Language	▶
Veh.Characteristic			
OBU Information			
Conf. Services			
Cost Center			
Customer Service			

Deutsch	▶	ok
English		
Français		
Español		
Italiano		
Čeština		
Polski		
Română		
Nederlands		
Hrvatski		
русский		
Magyar		

### Show activated toll services

Conf. Services	▶	ATasf
		BEvia
		BELiT
		DEbag
		DEthT
		ESvia
		FRTis
		ITtel
		Ptve

# TOLL4EUROPE OBU

## Enter vehicle parameters

VehCharacteristics > Axles Trailer > 0 ok  
 1  
 2  
 3  
 > 4

> Current weight > < 7,5t ok  
 ≥ 7,5t < 12t  
 ≥ 12t ≤ 18t  
 > 18t

The startup screen displays the parameter “current weight” in different ways, depending on the toll domain:

**Belgium - Viapass:** Belgium – Viapass: For Belgium, the maximum permissible gross weight for the vehicle combination is already stored in the system during registration and automatically displayed on the start screen, e. g. 11.8t.

**Germany - BAG:** Germany - BAG: In Germany, the current, actual total weight for the vehicle combination (tractor + trailer) is displayed, which may differ depending on the load / trailer and therefore must be specified separately by the driver via the OBU. When selecting a range, e. g. > 7.5t and <12t, always the lower value will be displayed on the OBU screen.

## Show OBU ID and software versions

OBU Information > Release Info > SW Version > x.0  
 > DSRC Firmware > x.10  
 > Base Version > x.0

> OBU Identification > 000070000000503

## Show Account Info

Account Info > Payment Info Scheme: Post-paid

## Enter cost center

Cost Center > ABC-01234-5.0

Please enter your cost center here. You can use the following characters: Characters A-Z, digits 0-9, special characters (-) minus, (,) comma, (.) dot, and spaces.

You can choose the characters via the buttons up, down and right. Save your entry with a long pressure on the button right. If you have more than 17 characters you must scroll.

## Show number of customer support service

Customer Service > Phone number 0800 – 123 456 78

Please note the telephone number of your Customer Service here:

.....

## TOLL4EUROPE OBU

**Note:**

Depending on special regulations of a toll domain, the number of axles and the permissible total weight must be entered separately by the driver with regards to the current vehicle train.

You may find the full OBU Manual and further Quick Start Guides with the specific requirements for each toll domain on the website of your service partner or on [www.toll4europe.eu/en/downloads](http://www.toll4europe.eu/en/downloads).